



ASSEMBLY STEPS 1-4


1. Unroll 3 mesh fabric panels and lay on flat smooth surface. Ensure the long apron of all panels is positioned on the bottom and the black/yellow caution fabric is facing the same direction. Position panels adjacent to each other creating Left, Center ("STAY BACK") & Right panel.

TRI-GUARD® ASSEMBLY INSTRUCTIONS


Assemble all parts loosely.

Test product on a flat level surface before final tightening of all bolts.



Installation video available at NotchEquipment.com

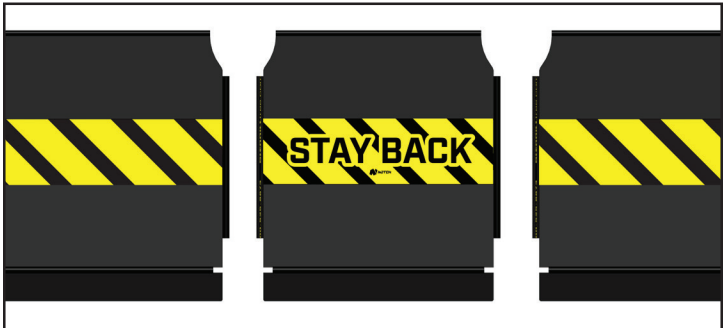

2. Insert Vertical bars (long bar) in both, right and left, pockets of the Center panel

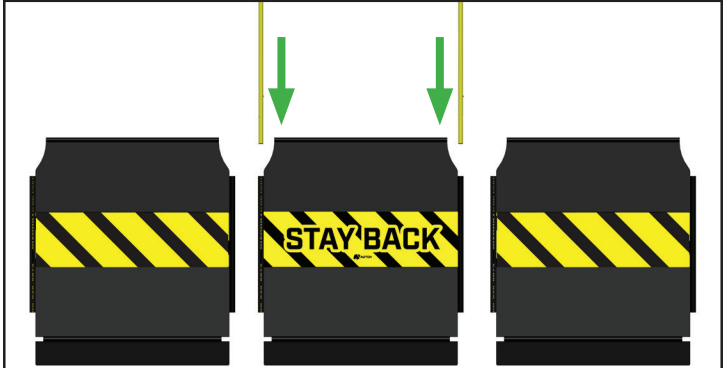


3. Insert Vertical bar (long bar) in the left pocket of the Right panel
4. Insert Vertical bar (long bar) in the right pocket of the Left panel

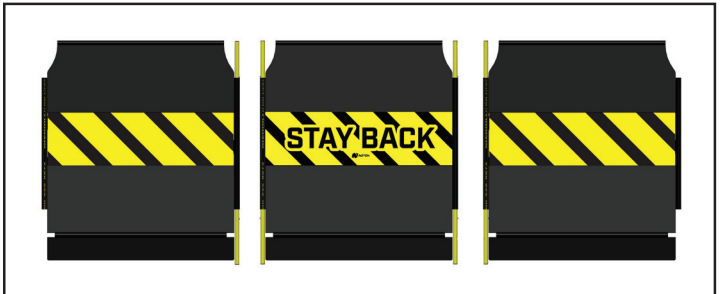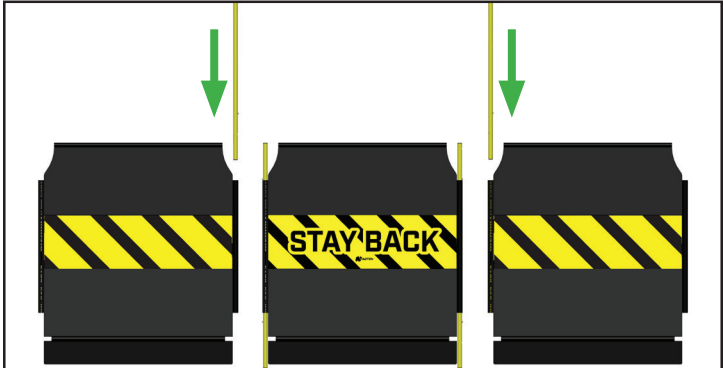


PART LIST


Mesh panel (3)

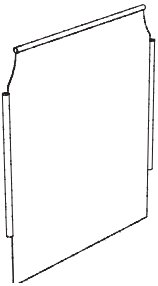

Horizontal bar (6)

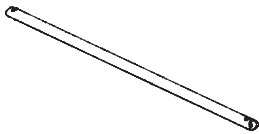


Allen head bolt (12)

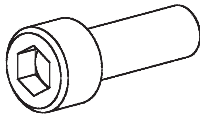

Vertical bar (6)




Connector (4)

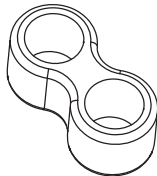


Allen wrench (1)
not pictured

ASSEMBLY STEPS 5-13


5. Connect the Center panel to the Right panel by sliding 2 figure-eight connectors on adjacent Vertical bars

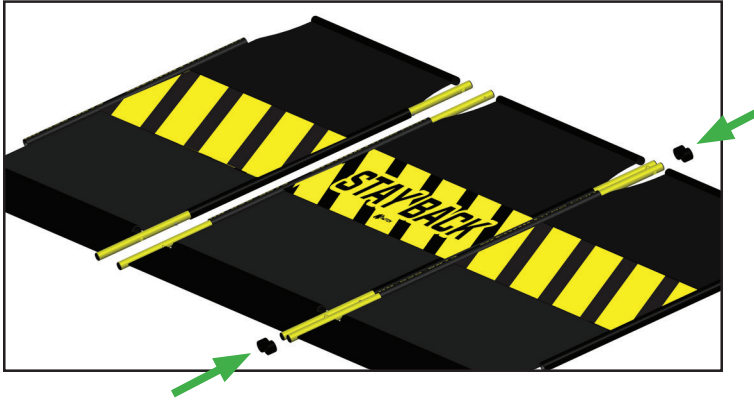


6. Repeat procedure with Left panel

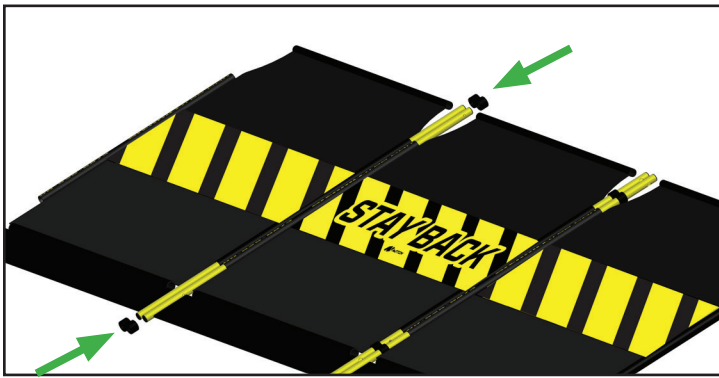


7. Insert top and bottom Horizontal bars (short bar) into the pockets of the Center panel
8. Connect top & bottom Horizontal bars (short bar) to Vertical bars (long bar) using Hex bolts of the Center panel (ensure the large hole is facing outward)

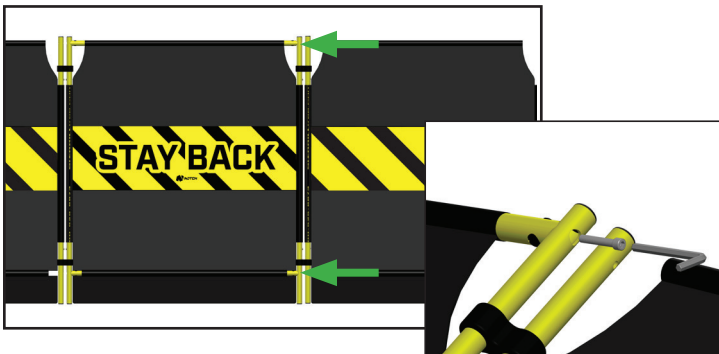

9. Insert remaining Horizontal bars (short bar) to top and bottom pockets of the Left and Right panels
10. Connect top & bottom Horizontal bars (short bar) to Vertical bars (long bar) of the Left & Right panels using Hex bolts

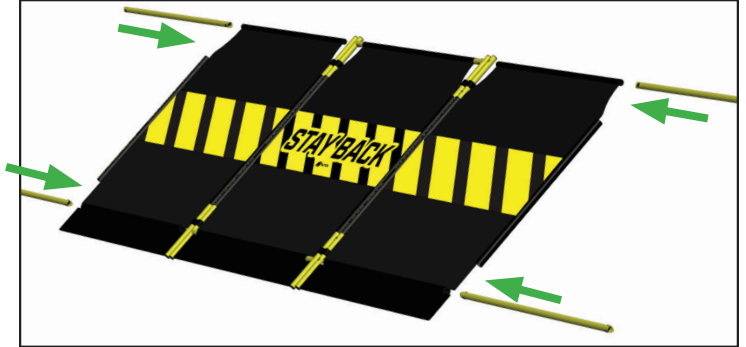

11. Insert remaining Vertical bars (long bar) into the outside pockets of the Left & Right panels
12. Stand guard in the upright position

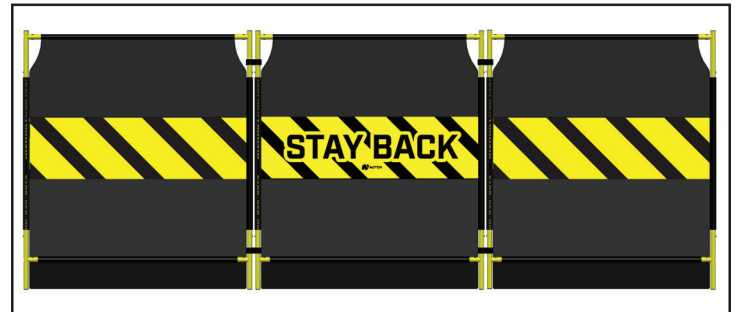

13. Retighten all Hex bolts

